


Ski Pressure Test Bench - Slytech



The bench in operation at the Department of Industrial Engineering of the University of Padua allows for the measurement of force distribution along a ski. For this purpose, each ski is pressed onto a plane composed of 21 uniaxial load cells, which detect the vertical load. The system allows for variation of the ski's inclination angle by loading the blade, from 0° to 60° . The ski is connected to a hydraulic actuator which, via an aluminum fake insole, simulates the ski boot and, for each angle, applies a proportional force within a range of 500 N to 1500 N.

Comparison results of different skis under the same load at a 40° inclination.

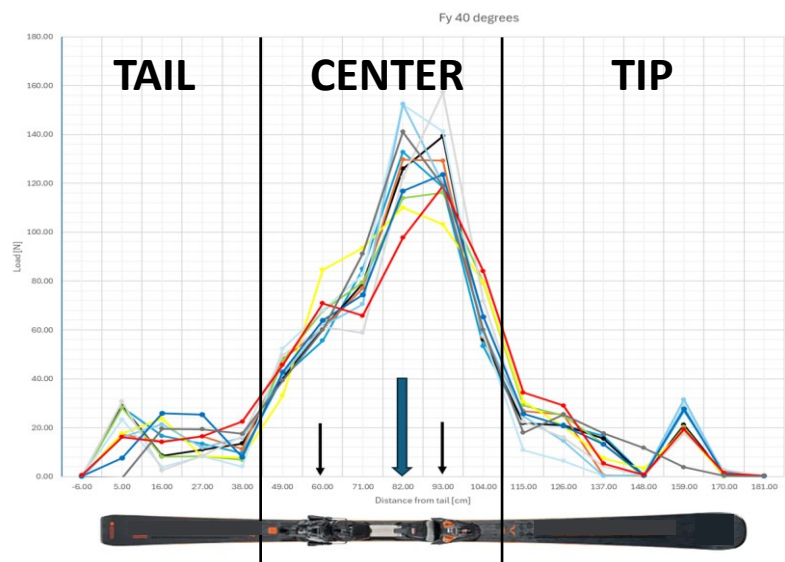

UNIVERSITÀ
DEGLI STUDI
DI PADOVA

[Petrone N. et al., 2012]

